


15-
18"

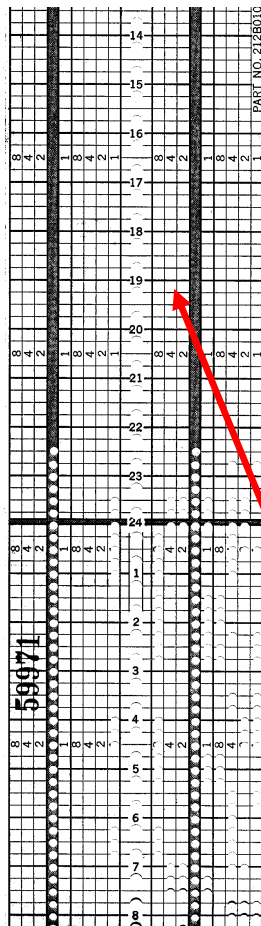


If you empty the bucket...

- Turn off the gage
- draw a line across the tape
- advance tape a little and write down station name, station number, date, time, and reason (i.e. emptied bucket & put in quart of mineral oil)
- then advance the tape 12+ inches
- draw a line across the tape
- turn the gage back on

- Put 12+ inches of blank tape at the beginning and end for each month.
- At the beginning and end of the tape for each month...write down the station number, station name, date, and time...or use the below label.

15-
18"

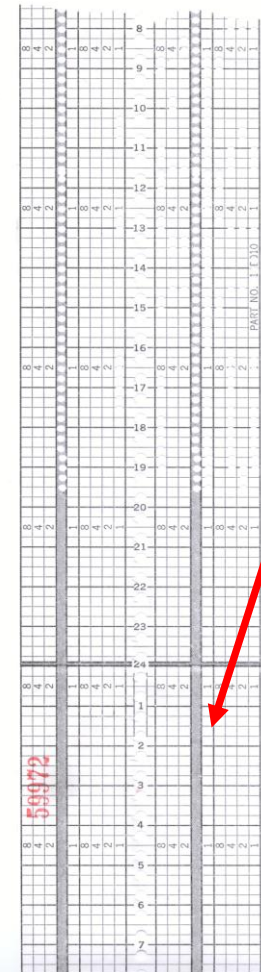

- Do not use the label to tape together the F&P paper.
- Do not put the label over the punched holes...i.e. the rain data.